



dPOFLEX® Industrial Peristaltic Pump

GP01, BP01

Max. Flow Rate:




PERISTALTIC PUMP

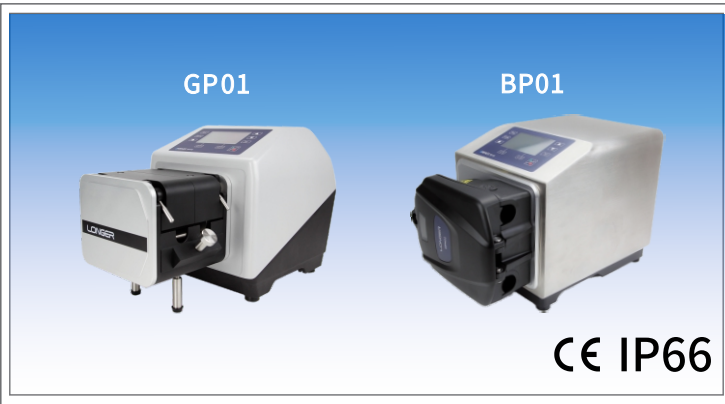


- Available in stainless steel housing and cast aluminum housing for variety of applications
- IP66 for wet and dusty environment
- Supports fieldbus communication control, digital signal control, analog signal control, and pump status output
- Three-level user authority management, with electronic signature and audit trail functions, meets 21CFR Part 11 and GMP requirements
- Integrates multiple sensors: fluid leakage sensor, open-head sensor and flowrate sensor, to support predictive maintenance

Pump drive model	dPOFLEX GP01	dPOFLEX BP01
Housing material	Cast aluminum	304sst
Speed range	0.1rpm-265rpm, CW/CCW	
Speed resolution	0.1rpm	
Display	4.3 inch LCD, Chinese or English	
Clock function	Year/month/day/hour/minute can be set, hours and minutes are displayed on the running screen	
Work mode	Flow rate mode, dispensing mode, calibration mode	
Flow rate mode	Pump runs continuously at the set flow rate, and displays flow rate and pump speed on the screen	
Flow rate setting range	1.1ml/min-17.0L/min depending on pump head and tubing	
Dispensing mode	Pump repeats the dispensing at set volume, cycles and interval time, and displays single volume, dispensed volume, dispensed cycles/target cycles on screen	
Volume of single dispense	1.0mL-274.9L depending on pump head and tubing	
Dispensing cycles	1-9999 (0 for unlimited)	
Interval time	5s-9999s	
Calibration function	Improve the flow rate and dispensing volume accuracy	
Control mode	Keypad control, foot switch control, external signal control and communication control	
Communication control	Standard:RS485 and Industrial Ethernet Interface, Modbus RTU and TCP/IP protocol, Optional: Profibus DP	
External control	Speed control: 0-10V, 4-20mA Start/stop, direction control: 5V-24V logic level signal or relay signal (dry contact)	
Status output	Pump Speed: 0-10V, 4-20mA, frequency signal Running/stop, tubing leak alarm/other alarm: 3 relay signal (dry contact)	
Open head sensor	Pump will stop when pump head is open for enhanced user safety	
Status when power up	Stop	
Keypad lock function	Enable the keypad lock function to lock the keypad automatically after 20s standby, (start/stop key will not be locked)	
Tubing leak detection	Detect the tubing leak and give alarm (optional)	
Flow rate measurement	Measure the flow rate by connecting flow meter (optional)	
User access control	Three levels of user accesses (administrator, technician, operator)	
Electronic signature and audit trail	Meet the requirement of FDA 21CFR Part 11	
Log record	Record 90 days operation history, and can be exported directly	
3Q verification	IQ/OQ	
Certificate	CE, UKCAEN 61010-1:2010 EN IEC 61010-2-201 EMC EN IEC61000-6-2 EN IEC 61000-6-4	
Dimension (LxWxH)	260x407x298mm	260x407x290mm
Power supply	AC100-240V 50/60Hz,250W	
Operating condition	Temperature: 5°C-40°C, relative humidity≤100%	
IP rating	IP66	
Weight (drive only)	≤17.6kg	≤16.6kg


BP01+LPH01

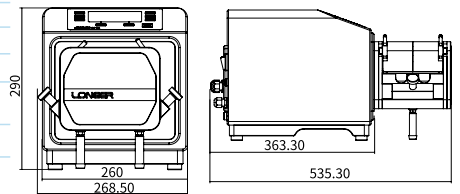


BP01+GPH01

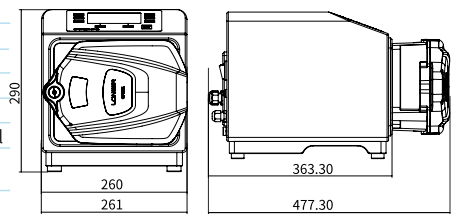

GP01+LPH01

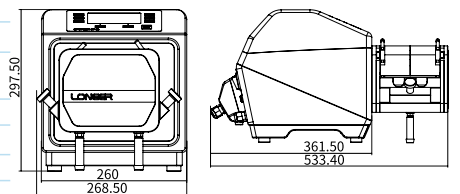

GP01+GPH01

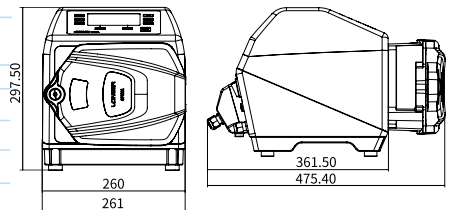

Model (Product Code)	Pump Head	Roller Number	Tubing	Reference Max. Flow Rate (L/min)
dPOFLEX GP01 (05.02.80A) dPOFLEX BP01 (05.02.81A)	GPH01	2	26#, 73#, 82#,184#	15
	GPH02	2	186#,188#	17
	GPH03	4	186#,188#	14
	LPH01	6	185#, 186#, 187#	13.5